

Automatic Blowdown Operation & Testing

Blowdown Duration Adjustment Instruction

NOTE: The Time Clock controls boiler operation. The boiler is on when the timer is on. The Blowdown Valve will open when the timer turns the boiler off.

! WARNING Hazard of Electric Shock. Disconnect all power supplies before making any adjustments

! CAUTION To provide for safe and low temperature blowdown, and to comply with National and local plumbing and building Codes, it may be necessary to blowdown into an ASME Code blowdown separator tank, or to take other precautions to prevent damage to building drain plumbing. Consult with a licensed plumber.

! WARNING Burn Hazard. Pressurized Steam and Hot Water is discharged during blowdown.

Duration Adjustment

Using a small flathead screwdriver, rotate the adjustment screw to the desired setting.

IMPORTANT: Do not set less than 10 seconds. Do not force screw past min and max stops, screw does not rotate more than 300 degrees

Factory Recommended Settings:


- 100psi Trim: 50% turn (shown, 30 seconds)
- 15psi Trim: 100% turn (shown, 60 seconds)

Automatic Blowdown Operation & Testing

1. Turn the override switch to permanent ON (I).
2. Turn the generator On/Off Switch to "ON". On/Off Switch pilot light and generator should be "ON". Motorized drain valve should be closed. Auto blowdown light should be "OFF".
3. Turn the override switch to permanent OFF (O). On/Off Switch pilot light and generator should be "OFF". Auto blowdown light should be "ON" Motorized drain valve remains open for the duration set with the adjustment screw.
4. After the set time: Motorized drain valve closes. Auto blowdown light should be "OFF". On/Off Switch pilot light and generator remains "OFF".
5. Turn the override switch to automatic (⊕).

NOTE: ASME blowdown separator tank systems are available from Sussman Electric Boilers/Mr. Steam.

For more information please call 1-800-76 STEAM.

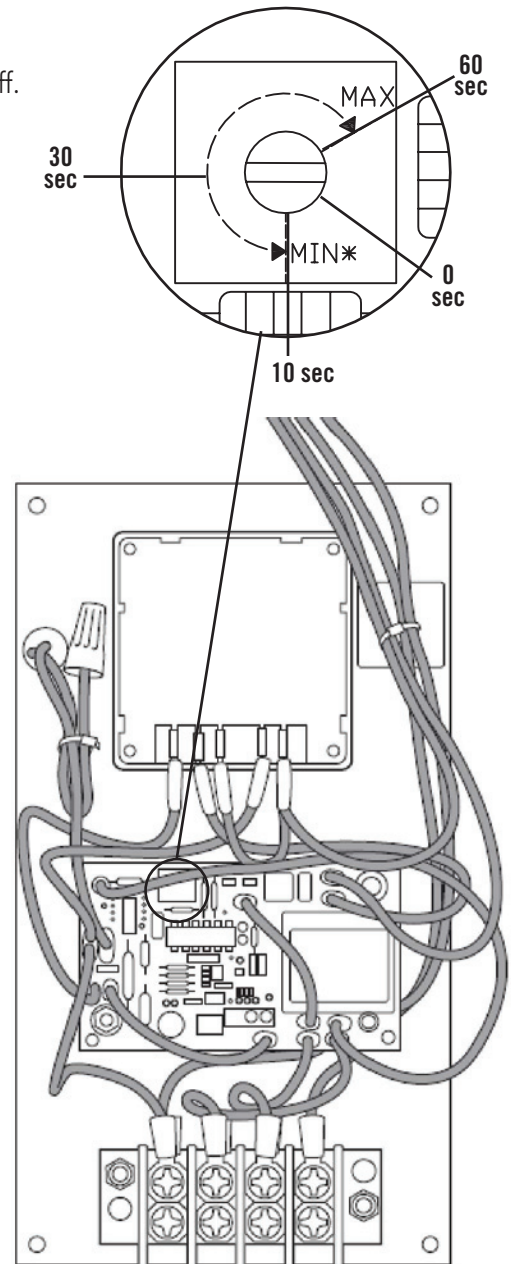

Back

100483 rev. 9.13

SUSSMAN
ELECTRIC BOILERS

mr.steam®

Sussman-Automatic Corporation® 43-20 34th Street, Long Island City, NY 11101
www.sussmanboilers.com • seb@sussmancorp.com • 718-937-4500 • 800-238-3535 • Fax: 718-937-4676
www.mrsteam.com • info@mrsteam.com • 800 76 STEAM • FAX: 718 472 3256
WEST COAST: 9410 S. La Cienega Blvd. Inglewood CA 90301 • 800 72 STEAM • FAX: 310 216 2944