



READ ME FIRST!



⚠️WARNING The **MrSteam® Virtual Tech** instructions are intended to assist electricians troubleshoot and service MrSteam steam generators and accessories. All troubleshooting and/or service must be performed by qualified and licensed electricians only. MrSteam steam generators contain high voltage electrical components that can cause injury or death. Always read the complete MrSteam Installation and Instruction Manual supplied with the product. Manuals are available at www.mrsteam.com under Technical Downloads. Technical Support Representatives can be reached by calling 800-767-8326 or 800-727-8326.

As you follow these instructions, you will notice **WARNING**, **CAUTION** and **NOTICE** symbols. This blocked information is important for the safe and efficient troubleshooting and service of MrSteam products. These are types of potential hazards that may occur during installation and operation:

⚠️WARNING Indicates a potentially hazardous situation, which, if not avoided, could result in death or serious injury.

⚠️CAUTION Indicates a potentially hazardous situation, which, if not avoided may result in minor or moderate injury or product damage.

⚠️NOTICE This highlights information that is especially relevant to a problem-free installation.

All information in these instructions is based on the latest product information available at the time of publication. Sussman-Automatic Corporation reserves the right to make changes at any time without notice.

⚠️WARNINGS

- Never use damaged or equipment requiring service, doing so may result in an inoperative or hazardous installation.
- Discontinue use of the steam generator, control and accessories if they are damaged or otherwise not functioning properly. Doing so may result in an inoperative or hazardous installation
- MrSteam steam generators are connected to 240V line voltage and contain live electrical components. All installation and service to be performed by qualified and licensed electricians and plumbers only. Installation or service by unqualified persons or failure to use MrSteam parts may result in property damage or in an electrical shock hazard.
- The MS series of steam generators are for residential use only. Commercial or other nonresidential applications void the warranty and may adversely affect product performance and may represent a safety hazard.



Product: E-Series and I-Series Controls

Problem: How to Identify the Different Series

Controls

Both “E” and “I” controls are compatible with E-series units.

- **eTempo® Control** is 4” round or square at 1” thick. The faceplate is brass with multiple designer finishes available. It has 3 buttons (ON/OFF, PAUSE and Up-Down arrows) and a foot long black pigtail out the back. The MrSteam logo is laser printed instead of a sticker
- **eTempoPlus® Control** same as the eTempo but with 7 buttons (TEMP, TIME, ON/OFF, CHROMA, AROMA, P1/P2 and Up-Down arrows). Displays actual time clock 24/7.
- **iTempo® Control** is 5” round or square at 3/8” thick, available in multiple finishes. Buttons are flush with the faceplate. Buttons available: On, Off, Pause and Up/Down.
- **iTempoPlus® Control** same as the iTempo but includes TIME, TEMP, CHROMA, AROMA, and multiple user program setting buttons.
- **iSteam® Control** is a 6.25” x 4.75” touch screen control at 1/8” thick. It is available in black or white only and can be integrated with music and Auto-Start®. It has two pigtails out the back, one for the control (Black) and the other for audio (Blue).



eTempo



eTempoPlus



iTempo



iTempoPlus



iSteam